


CST-6 Stripping Tool

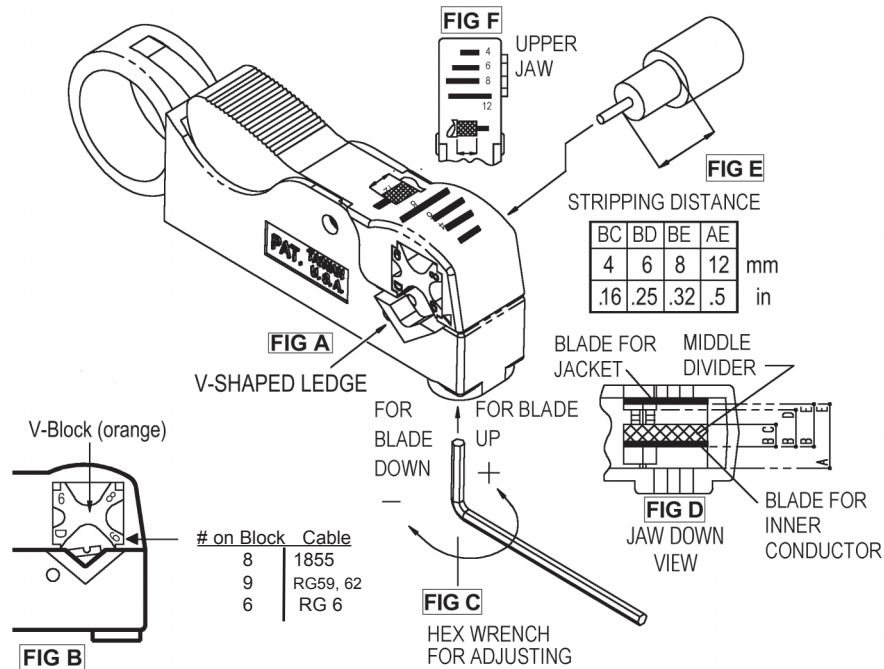

Operation

- A. Insert cable with the end aligned with the edge of the V-block.
- B. Rotate tool clockwise (approximately 5 times.)
- C. To prolong blade life, it is recommended to remove the cut portions from the cable after the cable has been removed from the tool.

Setting for other cable

(Factory preset for RG-6 cable)

Adjust V-Block:

- A. Slide out the orange V-Block and re-insert so that the black indication arrow is aligned with the needed cable setting. See FIG-B

Adjust Blade Depth:

- B. Adjust blades to proper depth by using the provided hex wrench. See FIG-C

Adjust Strip Distance:

- C. Use tweezers to pick up and install the blades. The different stripping distances are shown in FIG-E. Place the blade for the center conductor on A or B and the blade for the jacket on C,D, or E (FIG-D). The letters A,B,C,D,E are shown on the CST-6 and the stripping distances given in FIG-F.