


MOR-71: 2 Post Head-End Rack Installation Instructions

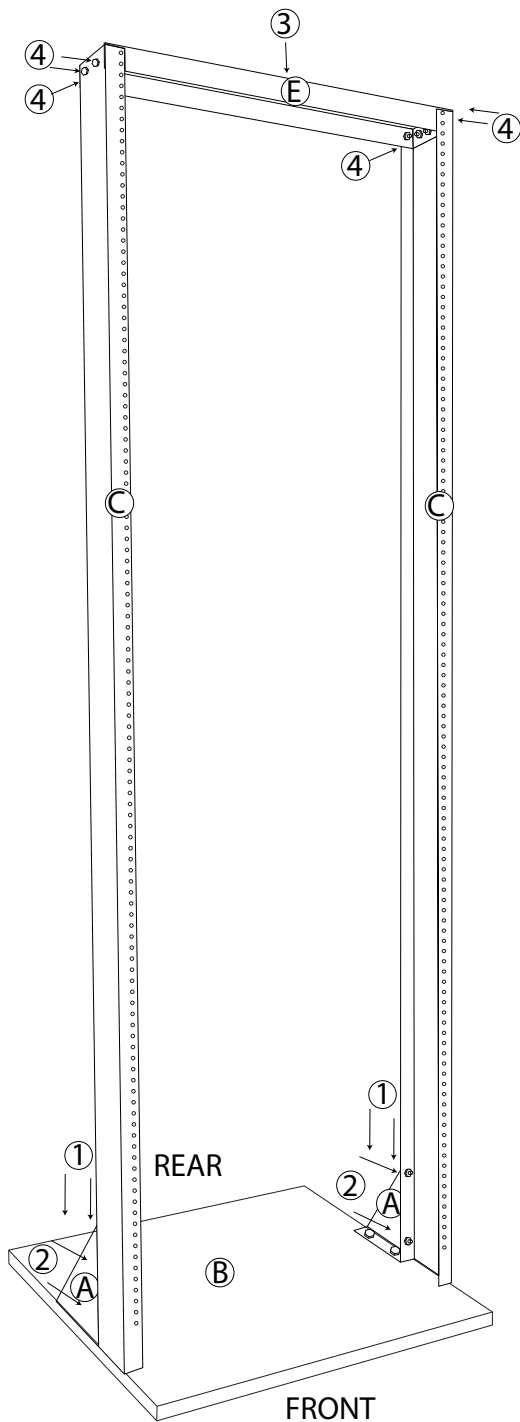


Tools needed:
 - 7/16" Wrench
 - 7/16" Socket

Also included:
 - 14 - 7/16" nuts
 - 14 - 7/16" bolts



A: (2) Triangular Mounting Brackets

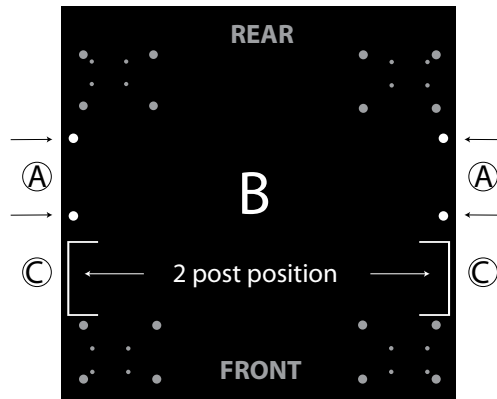

B: (1) Rack Base

note:

- extra holes are for casters
- the front of the base is opposite from the 4 post rack



E: (1) Top Front Stabilization Bar

C: (2) Front Rack Posts



1. Insert 4 bolts down through the triangular mounting posts (A) and the rack base (B) with vertical plane facing toward front of base
2. Bolt both front rack posts (C) to the triangular mounting posts (A)
3. Place top front stabilization bar (E) on top of front rack posts (C)
- 4: Insert 3 bolts on each side, through (E) and (C) and tighten