



Termination Instructions For Holland Fixed Pin Connectors



STEP 1

- A. Strip cable using appropriate strip tool (CPT-5738 or Equiv.)
- B. Fold braid back evenly around cable jacket

Foil should remain on dielectric

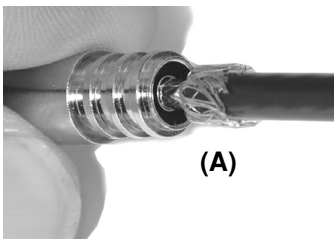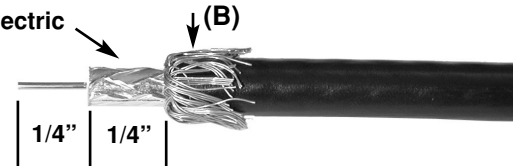


STEP 2

- A. Insert prepared cable into connector
- B. Push cable forward into connector while twisting connector slightly.
- C. If using compression F, RCA or BNC connectors, cable braid should be visible in connector viewing window when cable is fully inserted.



STEP 3

- A. Insert prepared cable & connector assemble into appropriate compression tool (CT-FBR or Equiv.) .
- B. Compress tool until tool has been fully compressed or ratchet handle releases.
- C. If using crimp F, RCA or BNC connectors, use any .270 hex crimp tool and fully crimp connector.

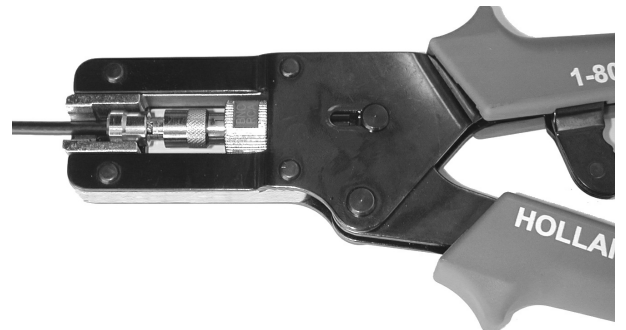

TIPS & TRICKS

- A. **DO NOT** cut braid off. The braid is required for the full holding force.
- B. After stripping cable, ensure that there are no braid strands wrapped around cable center conductor.
- C. Before crimping or compressing connectors, install the cable assembly to ensure continuity of termination.
- D. F, BNC, & RCA connectors use the die marked BNC/RCA in the CT-FBR tool.

RECCOMENDED TOOLS

